
SIGMA & MERLIN



Pressing Technology

Must separation

Controlled to the litre

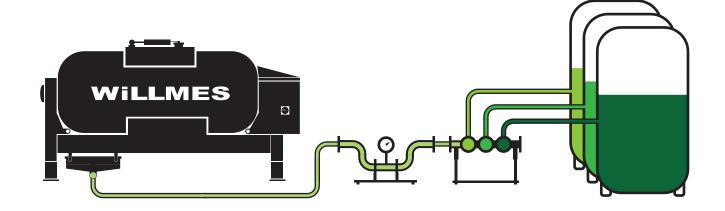

Short description

Litre-controlled must separation is known from champagne production. The valves are controlled and the pressing process fractionated automatically according to your settings.

Features and benefits

The quantity for each fraction is set before the program starts. The must separation then automatically switches to the next valve after the desired quantity has been reached.

The different versions of the must separation have two, three, or four valves mounted on a space-saving stainless steel frame.

The valves are easy to clean due to the use of pinch valves.



Must separation with three valves

Willmes GmbH · Bensheimer Straße 101 · D-64653 Lorsch · service@willmes.de · www.willmes.de