


Option suitable for:

SIGMA

WILLMES

Specialists in
Pressing Technology

Inert gas

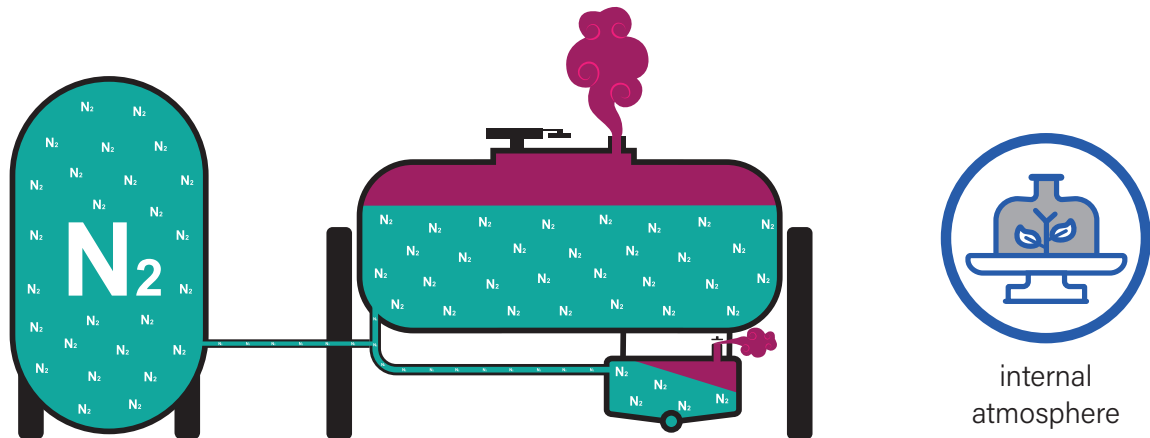

Short description

The additional inert gas option allows the SIGMA press to operate under an internal atmosphere in order to avoid or minimise undesired oxidation processes.

Features and benefits

In addition to the standard hermetically sealable tank, SIGMA presses equipped with the additional inert gas option also have a hermetically connected juice tray. The inert gas used is introduced into the press tank from the lowest point via the coupling between the tank and the juice tray, thus filling the entire tank and the tray. All processes are electronically controlled and monitored.

You can switch between inert gas and standard processing at any time, even during pressing, and limit the inert gas use to the necessary pressing cycles.

This complete solution requires only the provision of inert gas.

Stand 09/2021; Version 1.0