

Option suitable for:


# SIGMA & MERLIN

**WILLMES**

Specialists in  
Pressing Technology

## Must separation

cycle and press pressure controlled

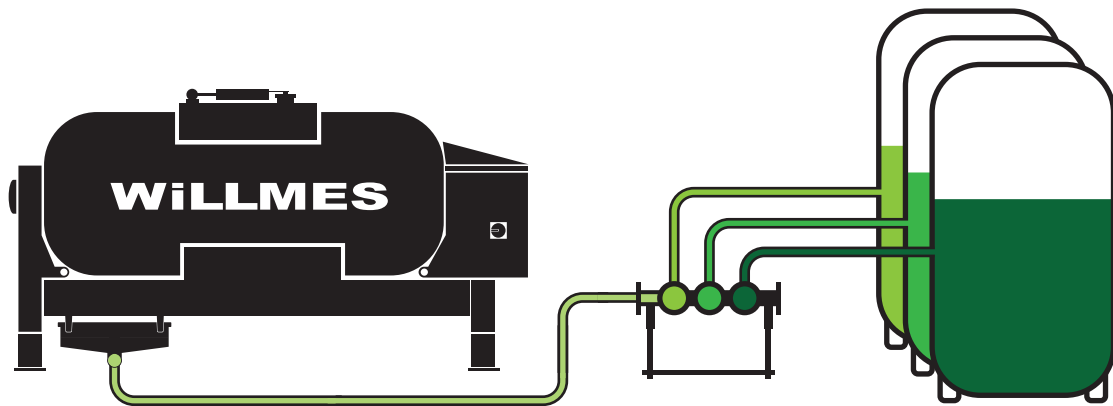

### Short description

Depending on your settings, the must separation fractionates the pressing process according to the cycle and the pressing pressure.

### Features and benefits

Before starting the program, select the exact end point for each fraction individually. The must separation then automatically switches to the next valve.

In the standard version of this option, two, three, or four valves are mounted on a stainless steel frame. This allows the required hoses to be arranged in a space-saving and orderly manner. The nominal size of the juice valves can be between DN65 and DN100. The valves are easy to clean due to the use of pinch valves.

If the must pump control option is also chosen, the juice that has already drained off is pumped to the last fraction used before switching over.

Stand 09/2021; Version 1.0